



# 1. Unboxing Your Printrbot Play

Written By: Printrbot Support

## Step 1 — 1. Unboxing Your Printrbot Play




- Congratulations on receiving your new Printrbot Play!
- ☑ Please visit [printrbot.com/play](http://printrbot.com/play) for getting started resources, downloads, and other helpful info.
- Remove your Printrbot Play by grabbing the top base bar.

## Step 2






- After Removing the accessory box and top foam packaging, find the following.
  - Assembled Printrbot Play
  - Laptop power supply with power cord
  - Sample of PLA filament
  - 1mm spacer (black delrin plastic rectangle)
  - Micro-USB cable
  - Spool rack attachment for Printrbot Play.

### Step 3

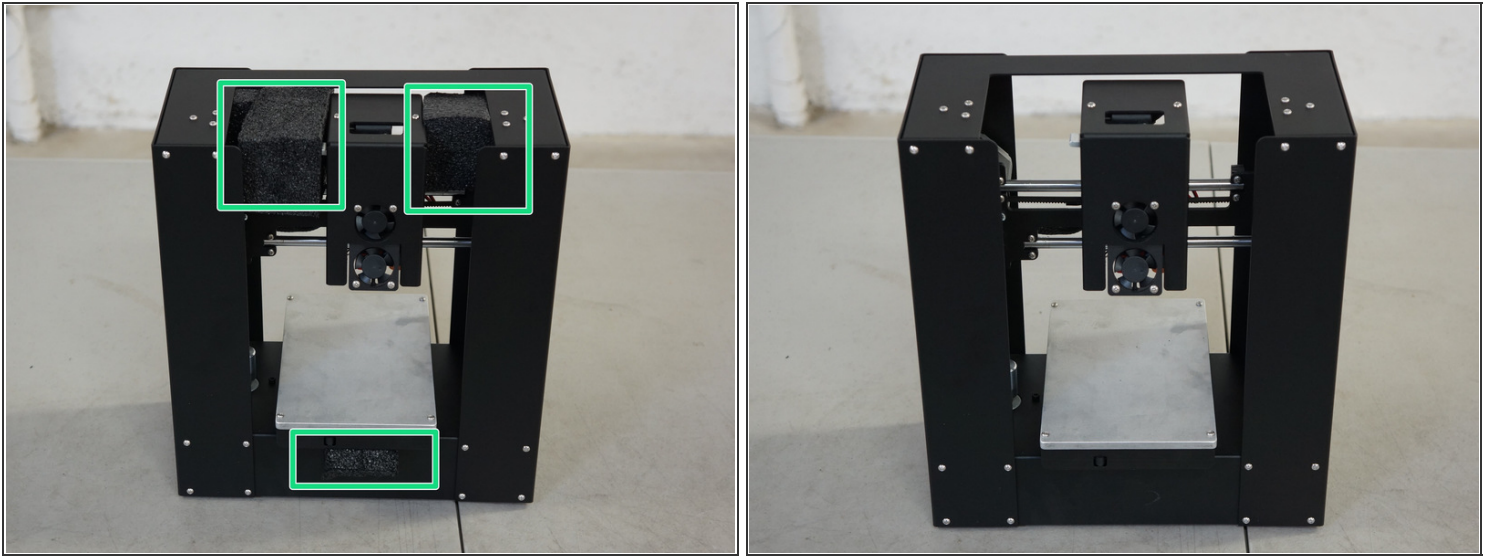

- After removing the plastic shipping bag, pull out the foam inserts holding the extruder and bed in place.

## Step 4 — Install the spool rack

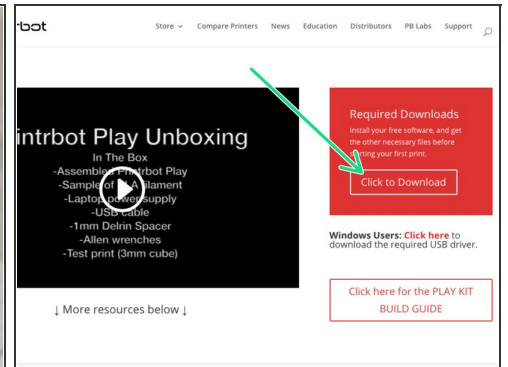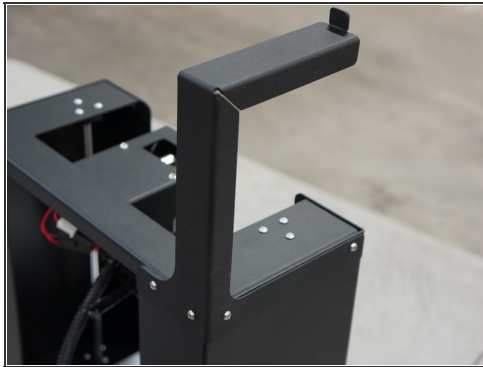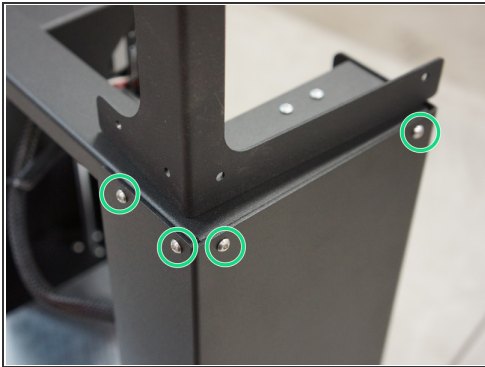

- Remove the M3 6mm (x4) from the left side of the Play using a 2mm hex wrench. Screw in the spool rack using the existing M3 6mm (x4) screws.
- Missing something? Let us know at [support.printrbot.com](http://support.printrbot.com).
- **NEXT STEPS:**
  - Visit [printrbot.com/play](http://printrbot.com/play) to access the **Required Downloads:**
    - Cura control software
    - Teensy **drivers for WINDOWS USERS**. Installing this driver is required for USB connection on Windows.
    - STL files for your first print!
  - After getting the Required Downloads, see [Getting Started With Cura on Your Printrbot Play](#)

This document was last generated on 2016-03-29 12:51:02 PM.